JETSTREAM FAN BLADE REPLACEMENT

PARFANJ250FO

WARNING!

Disconnect evaporative cooler from electrical source before beginning work on product. Electrical shock resulting in injury or death can occur when working in a wet environment. Perform all maintenance with evaporative cooler unplugged.

BEFORE BEGINNING

Position evaporative cooler with plenty of working room on all sides. Disconnect evaporative cooler from electrical and water supplies. The two back casters on the evaporative cooler must be in the locked position before beginning to work on this product.



BLADE REPLACEMENT

Step 1

Lock the casters to keep the evaporative cooler from moving while you are working. Blade replacements on the Portacool Jetstreams are made from the front side. Remove the grill attached to the housing of the evaporative cooler with eight screws. Remove the screws with a 5/16 socket drill and set the grill aside.

STEP 1



Step 2

Remove the fan hub cover from the evaporative cooler fan by grasping at the edge and then pushing in the center. Gently pull the cover from the fan hub and set aside.

STEP 2



Step 3

In the center of the fan hub, remove the nut and washer with a 3/4 inch wrench, saving both the washer and nut. Remove the fan blade by grasping the fan hub and sliding straight back out of the housing. BE SURE TO SAVE THE KEY FROM THE FAN HUB. Discard old fan hub.

STEP 3



Step 4

To replace the fan hub. Place the key back into the slot on the motor shaft. Line up the key with the notch on the new fan hub and slide the fan on to the motor shaft. Secure the fan hub with the center nut and washer. Replace the black plastic cap on the center of the fan hub by pressing in place until secure. Place the grill back on the housing. Secure the grill with eight screws.

VISIT PORTACOOL.COM

PORTACOOL.