

Installation Instructions

Infinity IAM4Z/AUD 4 Zone Annunciator & Audible Modules



Installation and wiring should be performed by qualified personnel only - Equipment damage and/or malfunction may result from improper installation. Remove all power from the system until the installation is complete and ready for testing. All work of any kind shall be performed to meet the requirements of any and all local, state and federal codes and/or standard set by the authority having jurisdiction.

This package includes all necessary parts except the mounting box, cover and mounting screws. Utilize a standard single gang mounting box (IGB). One gang space is required for each module to be installed. A standard Infinity style cover plate (IGP) is required to cover the assembly.

Install the **IAMAUD** first when combining with one or more **IAM4Zs**.

1. Label the LEGEND SHEET(S) for the IAM4Z(S) (if any) as instructed on the carrier card(s).
2. Mount the BOX securely into the wall.
3. Connect conduit and/or pull wiring as required.
4. Remove the FACE PLATE from the FRAME. Notice the routing of the SILENCE switch cable (if applicable).
5. In most cases this cable need not be disconnected. Use the slack cable to allow the FACE PLATE to be moved out of the way.
6. Terminate wires and set jumpers as described on the reverse side of these instructions.
7. Attach FRAME to BOX using FRAME SCREWS.
8. Replace FACE PLATE onto FRAME.
9. MULTIPLE GANG installations: Connect JUMPER to H2 of Module and allow to protrude from the BOX temporarily.
10. Connect the JUMPER to H3 of the next IAM-4Z. Repeat steps 1 thru 9 until all MODULES all wired and installed.
11. Insert labeled LEGEND SHEET(S) into IAM-4Z (as applicable).
12. Review and confirm field wiring and set-up with instructions on the reverse side of these instructions.
13. **DAMAGE AND / OR MALFUNCTION CAN RESULT FROM IMPROPER WIRING AND / OR SET-UP.**
14. Place the COVER over the FACEPLATE(S) and secure with COVER SCREWS.
15. Power up the system and test for proper operation of all zones and functions.

Ordering Information:

Part #	Description
IAM4Z	4 Zone Annunciator
IAMAUDK	Annunciator Trouble Buzzer Keyed
IAMAUDR	Annunciator Trouble Buzzer Rocker

Note: IAM4Z is NOT ULC Listed

©Space Age Electronics, Inc. 2007
EC0300 LT10452


Rev.C

1/2


Space Age Electronics, Inc.
www.1sae.com
800.486.1723 voice
508.485.0966 direct
508.485.4740 fax

No Excuses, Just Solutions!


BASE MODULE, MULTI GANG

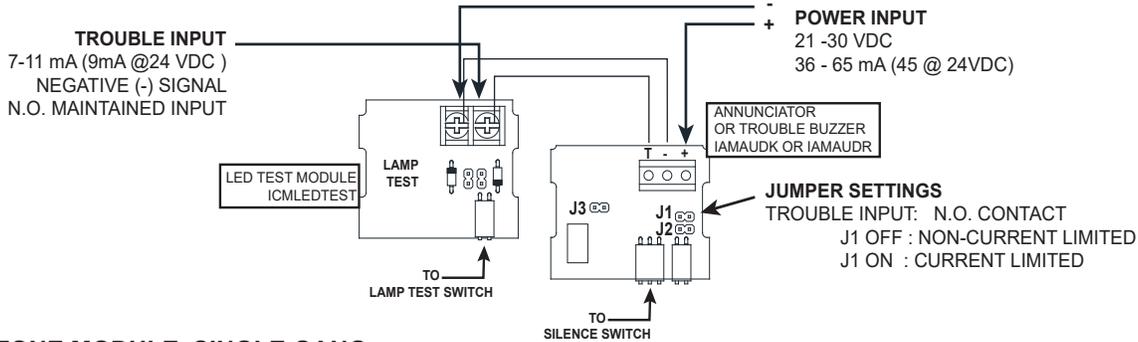


ZONE MODULE, SINGLE GANG

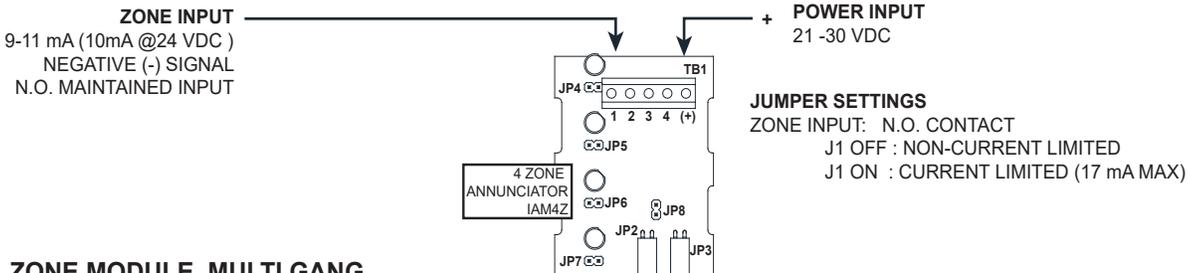

ZONE MODULE, MULTI GANG

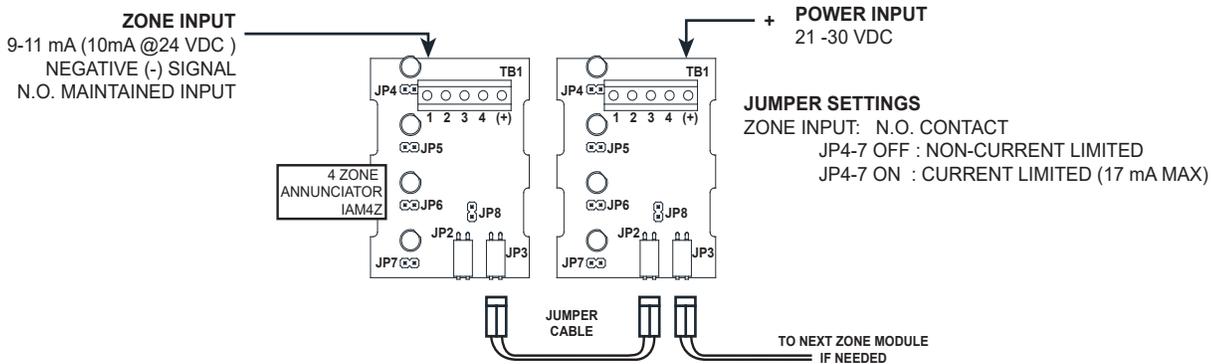

BASE W/ ZONE MODULE, MULTI GANG

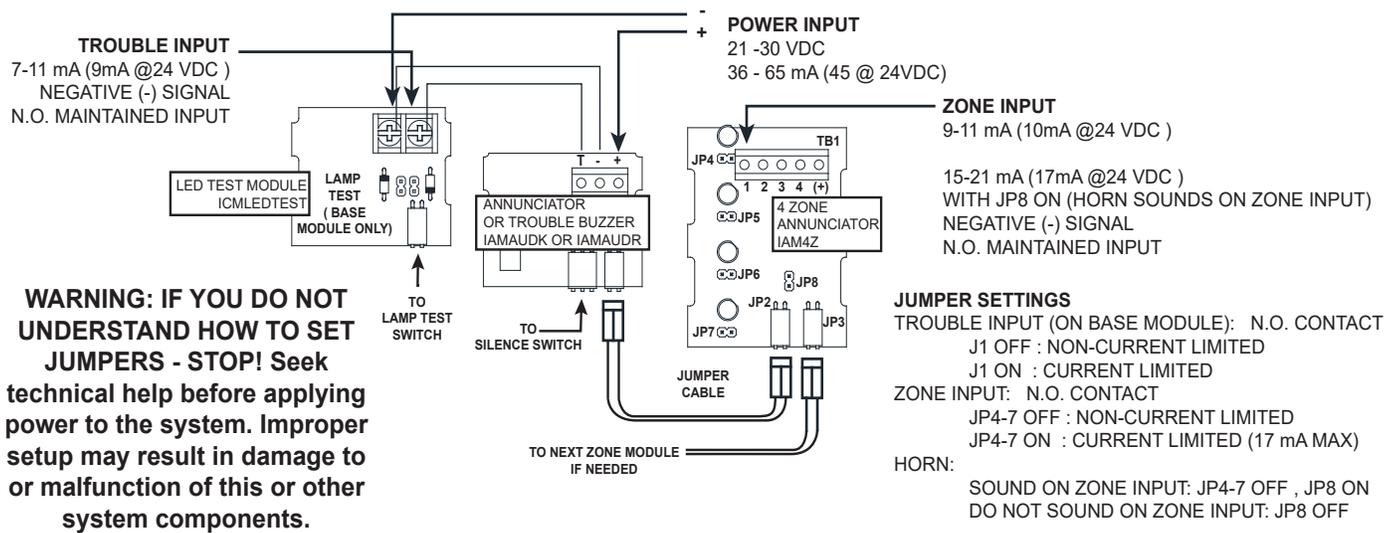

WARNING: IF YOU DO NOT UNDERSTAND HOW TO SET JUMPERS - STOP! Seek technical help before applying power to the system. Improper setup may result in damage to or malfunction of this or other system components.