


# MODEL W1S4840W6

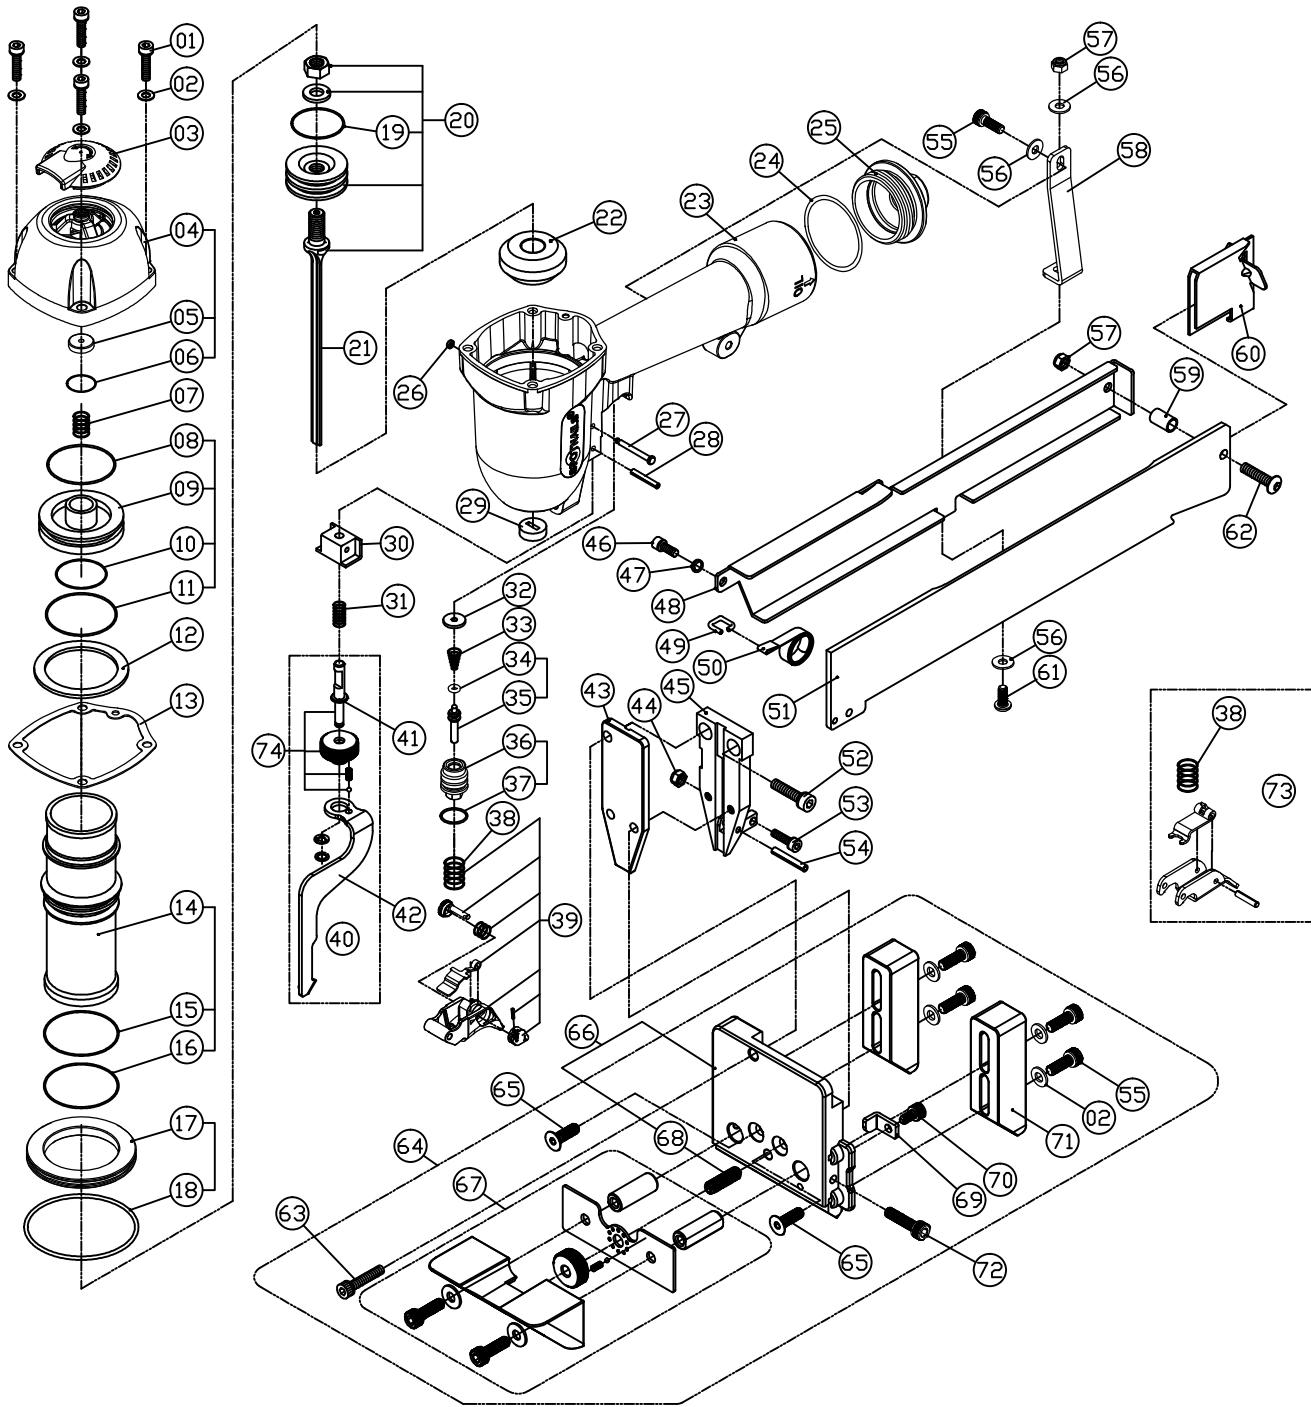

Ref No.	Part No.	Description	Ref No.	Part No.	Description
01	P-24358	Cap Screw - 6PCS	38	P-18267	Spring
02	P-32211	Flat Washer - 8PCS	39	AS-21039	Selectable Trigger (Blue)
03	P-70062	Exhaust Deflector	40	AS-53096	Safety Assembly
04	P-60227	Cap	41	P-07507	Safety Pin
◆ 05	P-15193	Exhaust Seal	42	P-52038	Safety
◆ 06	P-64384	O-Ring	43	P-10338	Front Plate
07	P-18331	Poppet Spring	44	P-26125	Nut
◆ 08	P-64385	Poppet O-Ring	45	P-08509	Wear Plate
09	P-63038	Poppet	46	P-24309	Screw
◆ 10	P-64233	Piston Stop O-Ring	47	P-32234	Washer
◆ 11	P-64386	Cylinder Seal O-Ring	48	P-12232	Magazine Cover
12	P-03070	Guide Spacer	49	P-18233	Spring Clip
◆ 13	P-62097	Gasket	50	P-18232	Negator Spring
14	P-05137	Cylinder	51	P-12231	Magazine
◆ 15	P-64387	Cylinder O-Ring	52	P-24306	Screw
◆ 16	P-64242	O-Ring	53	P-24311	Screw
17	P-05136	Cylinder Guide	54	P-07290	Roll Pin
◆ 18	P-64633	Cylinder Guide O-Ring	55	P-24312	Screw - 5PCS
◆ 19	P-64388	Piston O-Ring	56	P-32170	Washer - 3PCS
20	AS-06058	Piston & Driver Assembly	57	P-26124	Nut - 2PCS
21	P-06240	Driver Blade	58	P-13141	Bracket
22	P-15195	Bumper	59	P-03053	Spacer
23	P-01317	Body	60	P-09149	Pusher
24	P-64425	O-Ring	61	P-24310	Screw
25	P-60175	End Cap	62	P-24319	Screw
◆ 26	P-64240	O-Ring	63	P-24456	Screw
27	P-07327	Trigger Pin	64	AS-99098	Flooring Assembly
28	P-07262	Pin	65	P-24607	Screw - 2PCS
29	P-15196	Return Seal	66	AS-99100	Plate Assy
30	P-53165	Safety Guide	67	AS-99099	Base Assy
31	P-18328	Spring	68	P-24605	Set Screw
32	P-15194	Valve Seal	69	P-13113	Cover Stop
33	P-18283	Spring	70	P-24304	Screw
◆ 34	P-64390	O-Ring	71	P-97442	Support Foot
35	P-22232	Plunger	72	P-24300	Screw
36	P-22166	Valve Housing	74	AS-53116	Safety Pin Kit
◆ 37	P-64391	O-Ring	◆ Parts Included In AS-97493 O-Ring And Seal Kit		

## ACCESSORIES (NOT INCLUDED)

73	AS-21040	Sequential Trigger (Red)			
----	----------	--------------------------	--	--	--