

X1T8664

T-NAILER




Air Pressure: 80-110 PSI

Max Air Pressure: 120 PSI

Air Fitting Size: 3/8" NPT

Loading

- Two different loading methods **A** or **B** are used depending on the length of T-Nails (as shown).
- A Guide Bracket **C** is installed on the tool in order to reduce jamming nails, using certain length of T-Nails. This Guide Bracket needs to be removed if using other lengths (as shown).

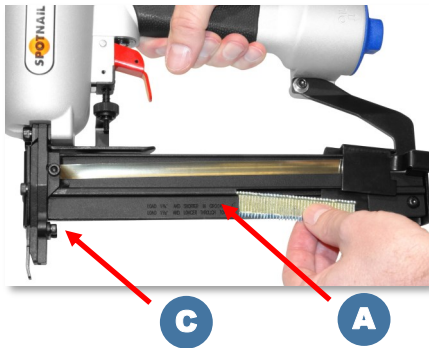

- Pull the magazine pusher back until locked.
- Load the fastener strips.
 - T-Nails 5/8" to 3/4" Side load in Slot **A** with Guide **C**
 - T-Nails 7/8" to 1-3/8" Side load in Slot **A** removed Guide
 - T-Nails 1-1/2" to 1-7/8" Top load **B** with Guide **C**
 - T-Nails 2" to 2-1/2" Top load **B** remove Guide
- Unlock the pusher.
- **Magazine capacity:** 100 fasteners.

Depth Adjustment

- Turn the wheel clockwise to reduce penetration (as shown).
- Turn the wheel counterclockwise for deeper penetration (as shown).
- Reducing or increasing the air pressure will affect depth of drive.

