



Sonetics®

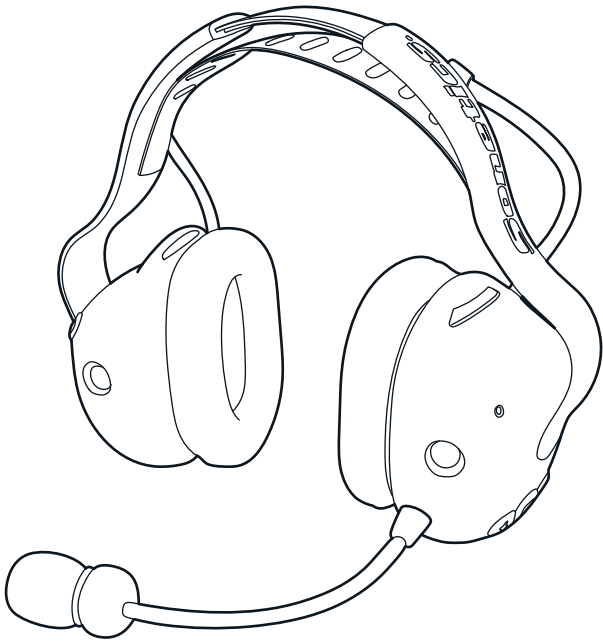

APX373 Electronic Headset Quick Start Guide

Basic features - controls

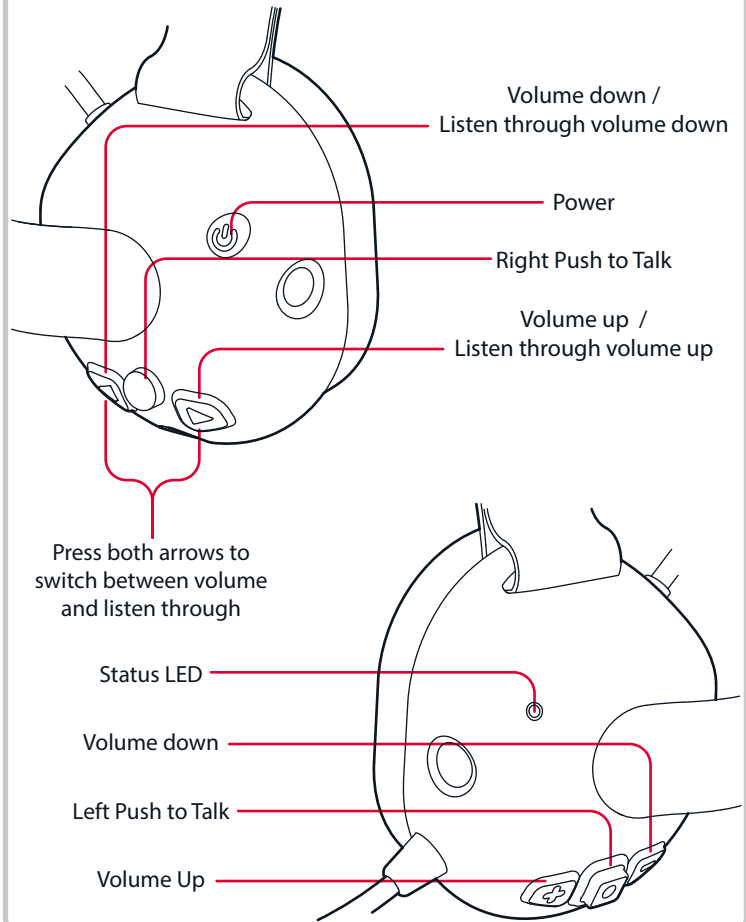

Sales



(503) 684-7080
(800) 833-4558

Service

(503) 684-7080
(800) 833-4558



(503) 620-2943
sales@soneticscorp.com


(503) 620-2943
service@soneticscorp.com

Complete manual available at
www.soneticscorp.com

7340 SW Durham Rd.
Portland, OR 97224

600-3064-000 Rev E

Basic features - controls

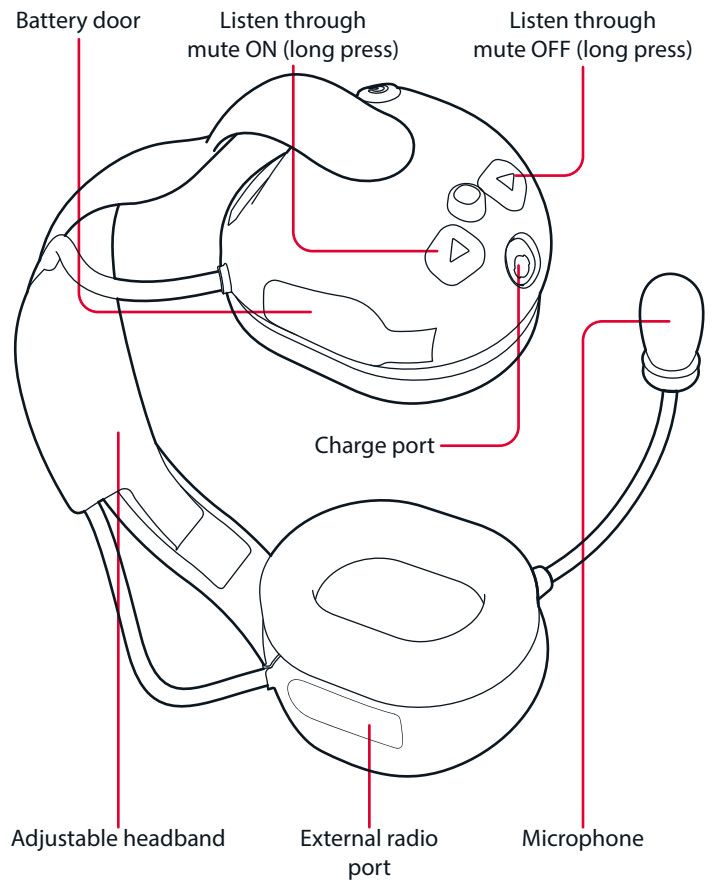


Status LED functionality

Battery level and connection status are both shown with the status LED.

Connection Status

When powered on, the color of the LED flashes indicates connection status.

● ● ● ● On

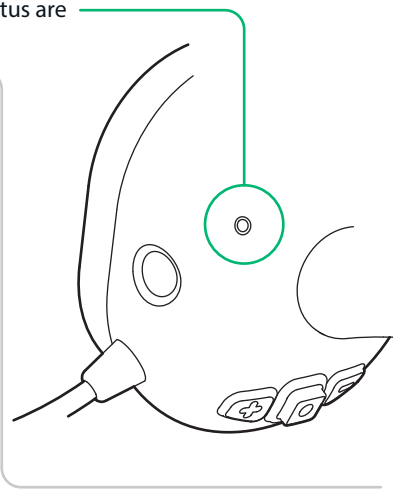

Battery Level


Number of pulses indicates battery charge level.




LED color will vary depending on connection type.

Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

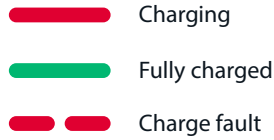

Mic positioning

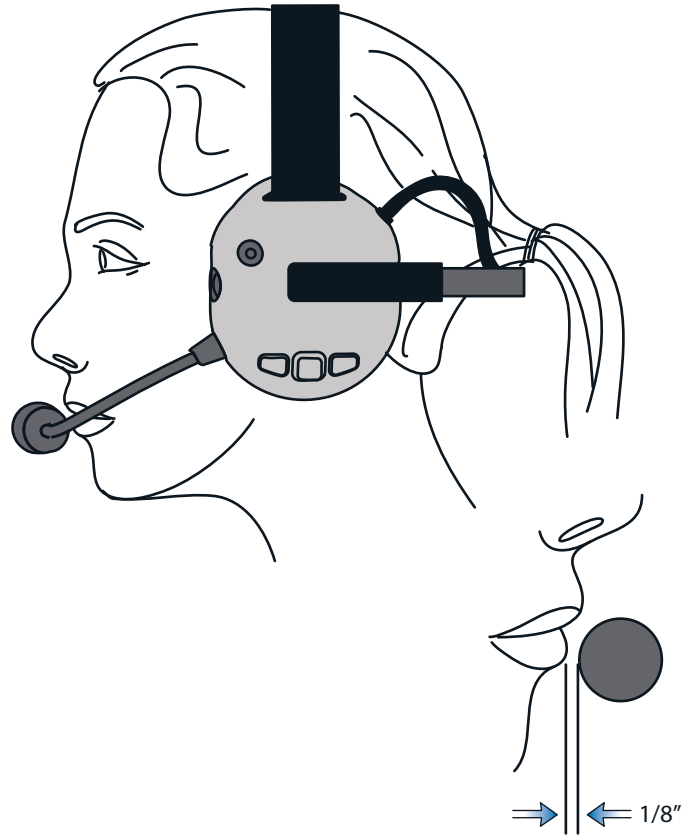


Position mic no more than 1/8" from lips.


Connecting a 2-way radio

For first use:

1: Remove ruggedizer.

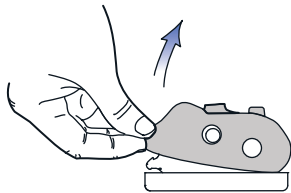


2: Cut along groove with sharp scissors.

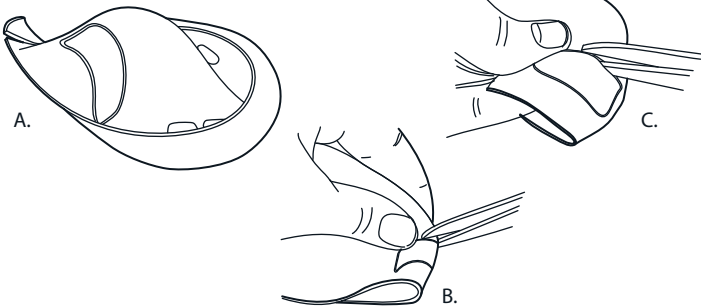


3: Replace ruggedizer.

4a: Open cover and plug in.


4b: Screw on connector.

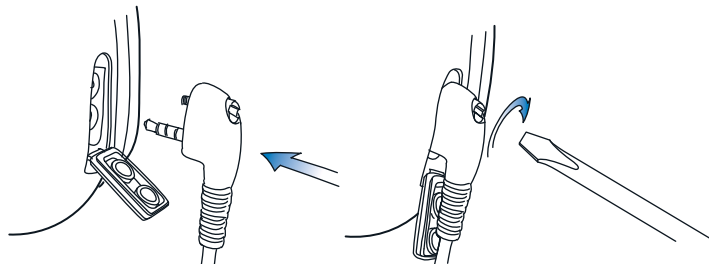

Headset charging

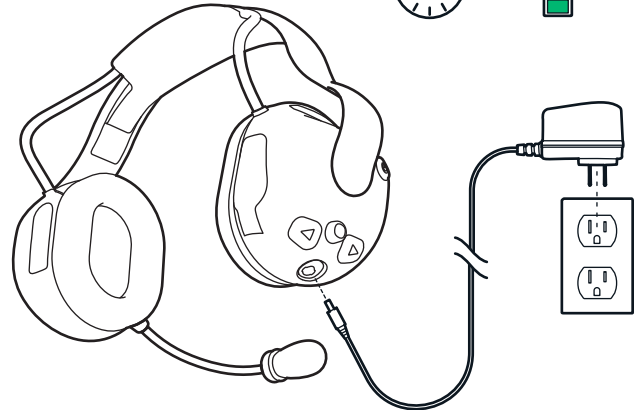

Use only supplied adaptor.

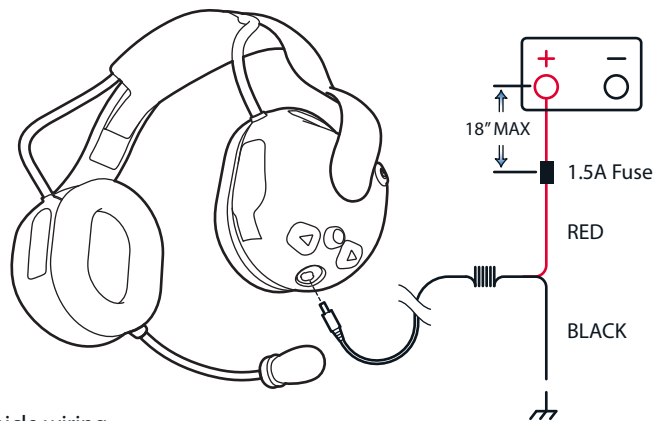

Vehicle wiring