


APX375 Electronic Headset Quick Start Guide

Basic features - controls

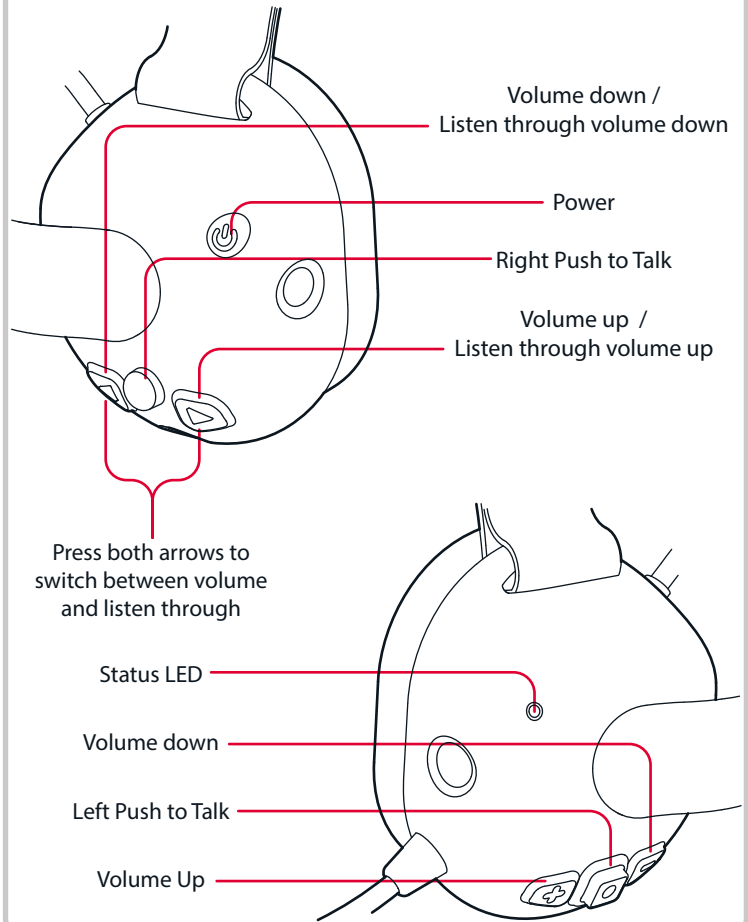

Sales



Service

(503) 684-7080
(800) 833-4558


(503) 684-7080
(800) 833-4558



(503) 620-2943
sales@soneticscorp.com

(503) 620-2943
service@soneticscorp.com

Basic features - controls

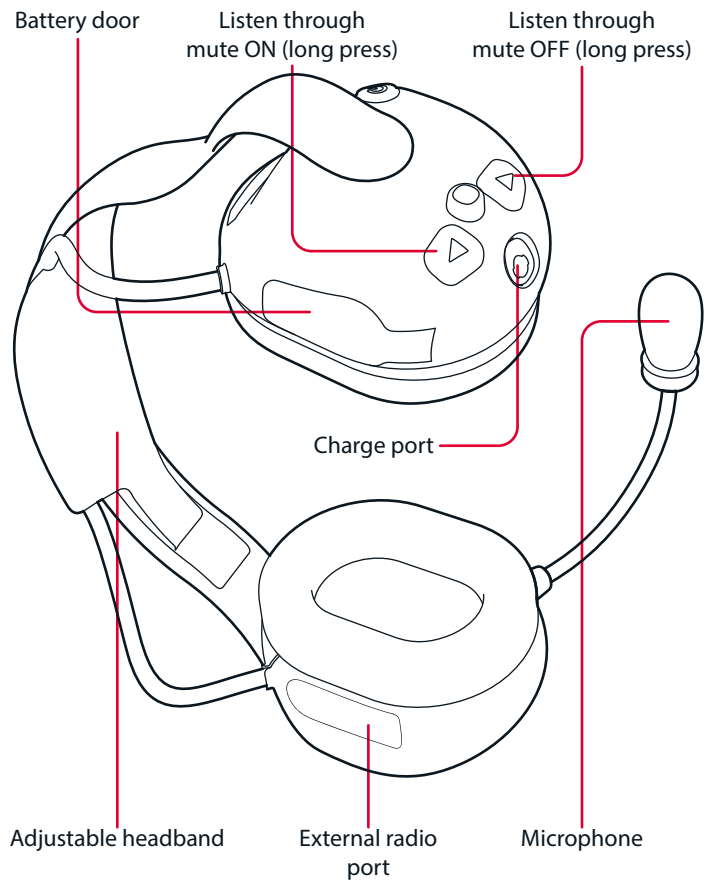

Complete manual available at
www.soneticscorp.com

7340 SW Durham Rd.
Portland, OR 97224


Status LED functionality

Battery level and connection status are both shown with the status LED.

Connection Status

When powered on, the color of the LED flashes indicates connection status.

- ● ● ● ● On
- ● ● ● ● Bluetooth connected

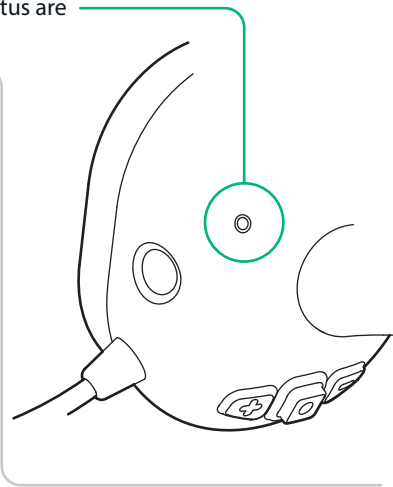

Battery Level

Number of pulses indicates battery charge level.




LED color will vary depending on connection type.

Charge Status

When plugged in, the color of the LED indicates charge state. Slow flashing indicates a charge fault.

- Charging
- Fully charged
- Charge fault


Mic positioning

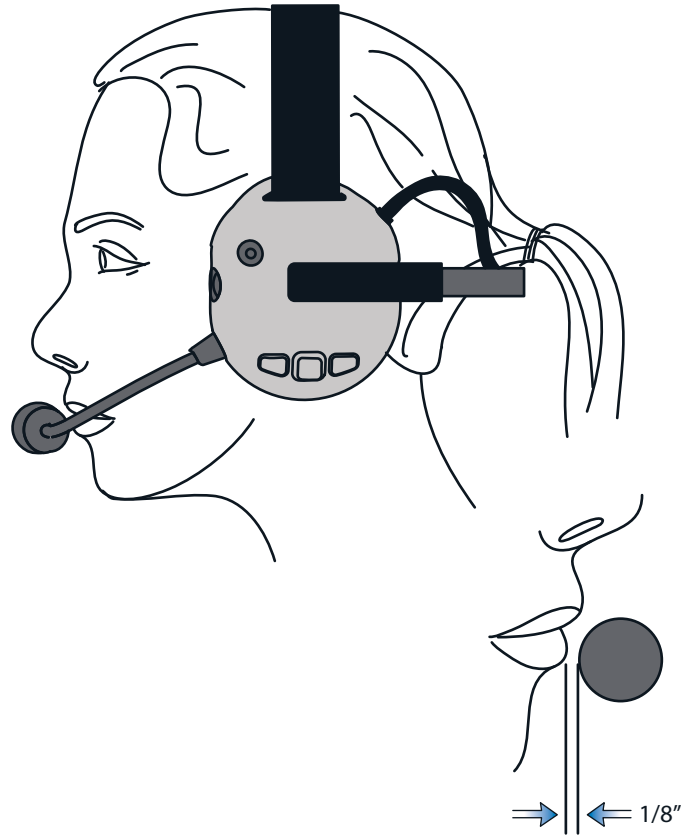

Position mic no more than 1/8" from lips.

New Bluetooth Pairing

- 1: Turn off headset.
- 2: Turn on headset.

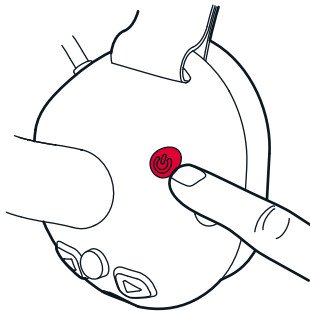

- 3: Headset enters Bluetooth pairing mode.



- 4: On phone, search for "Sonetics-HS-XX".
Password is "0000".


Bluetooth Use

- Answer call → Press Left PTT button.
- End call → Press Left PTT button.

Headset charging



Use only supplied adaptor.

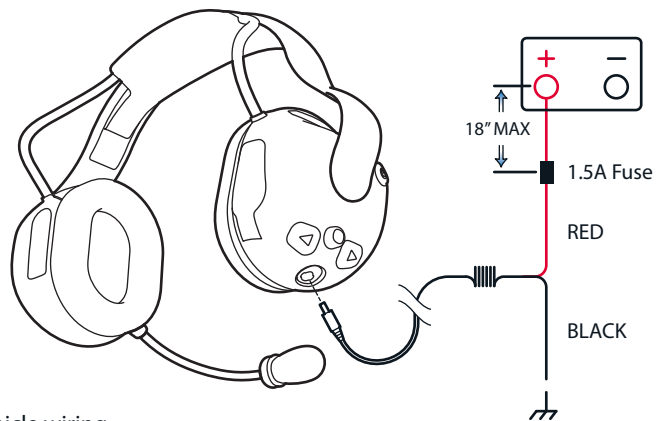

Vehicle wiring