


O-Ring and Flat Ring Replacement Instructions



Taprite inlet nipple O-rings and flat rings can be easily replaced.

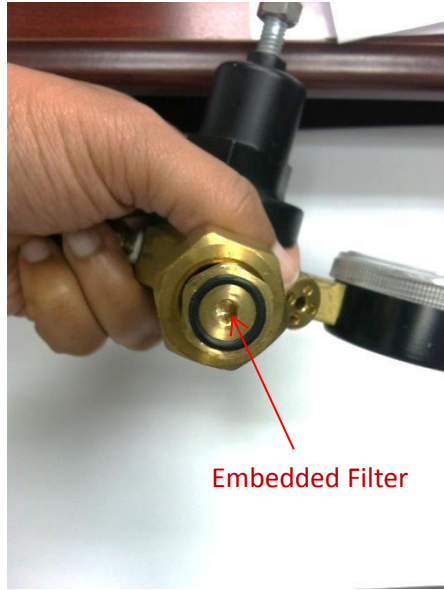

Note that the internal filter should remain in place during replacement.



Use a 5/32" hex key to remove the retainer and gain access to the ring.



Gently pry the ring up and out of the recessed space in the nipple.



Wipe the recess with a lint free cloth. Do the same with the ring if it will be reused.



Seat the new or cleaned ring fully into the recessed space. Invert reused rings before installing. The fit will be snug.



Retighten the retainer completely to prevent CO₂ leaks.



The tightened retainer will sit just below the top of both the O-ring or flat ring and the outer brass lip.