


MODEL X1S1640RFH

SPOTNAILS®

Division of Peace Industries, LTD.

1100 Hicks Road, Rolling Meadows, IL 60008
 P: 800-873-2239 / 847-259-1620 • F: 888-369-2588
 customerservice@spotnails.com
 www.spotnails.biz • www.spotnails.com

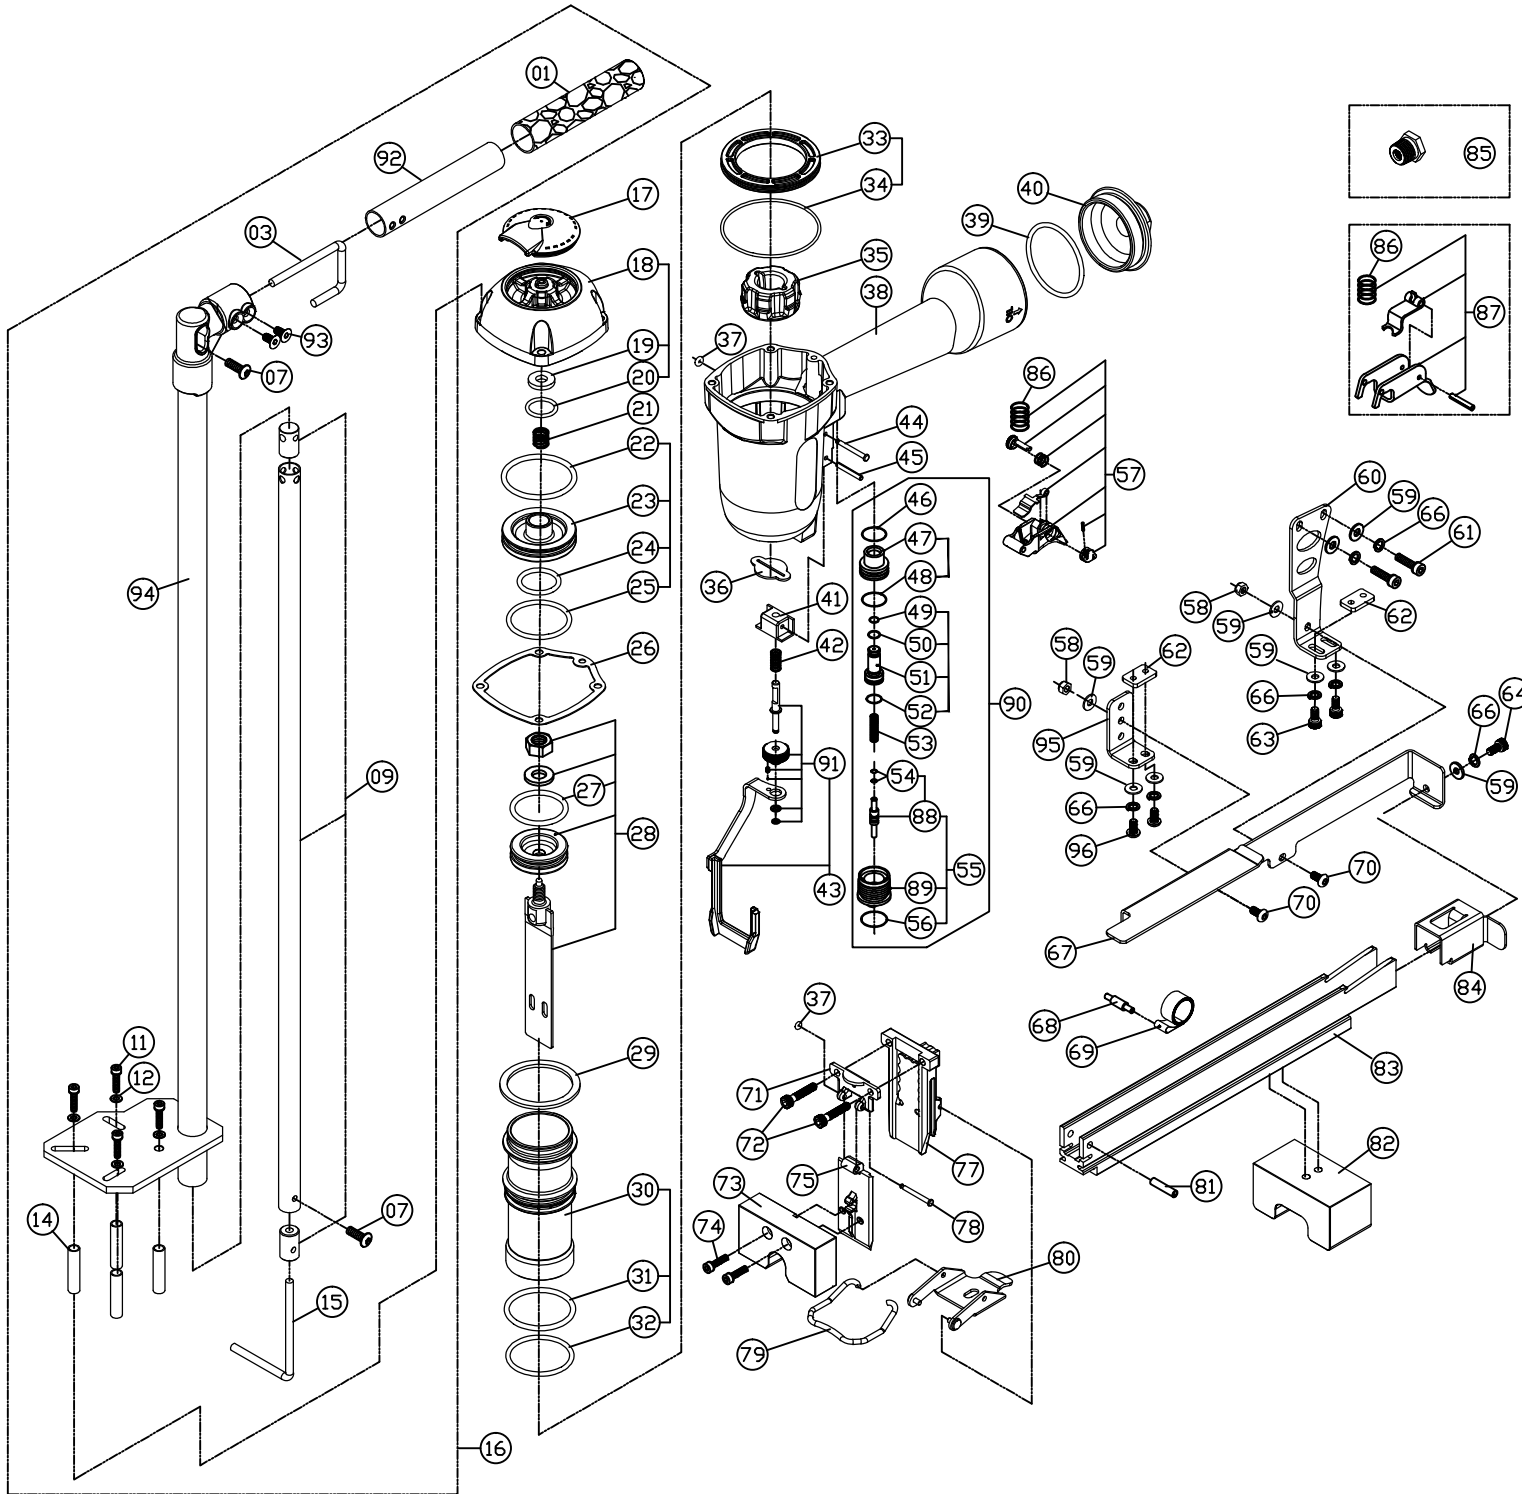

Ref No	Part No.	Description	Ref No	Part No.	Description	
01	P-99286	Handle Grip	51	P-22145	Pilot Valve	
03	P-99288	Upper Trigger Link	♦	52	P-64336	O-Ring
07	P-24495	Screw - 2PCS	53	P-18227	Spring	
09	P-99321	Trigger Connecting Rod	♦	54	P-64383	Plunger O-Ring - 2PCS
11	P-24496	Cap Screw - 4PCS	55	AS-22037	Plunger w/Housing Assembly	
12	P-32211	Flat Washer - 4PCS	♦	56	P-64328	O-Ring
14	P-96139	Cap Spacers - 4PCS	57	AS-21031	Selectable Trigger (Blue)	
15	P-99292	Lower Trigger Link	58	P-26126	Nut	
16	AS-99105	Universal Walking Stick	59	P-32170	Washer - 9PCS	
17	P-70058	Exhaust Deflector	60	P-13128	Bracket	
18	P-60221	Cap	61	P-24307	Screw - 2PCS	
♦	19	P-15187	Exhaust Seal	62	P-26159	Nut Plate - 2PCS
♦	20	P-64378	O-Ring	63	P-24300	Screw - 2PCS
21	P-18327	Poppet Spring	64	P-24308	Screw	
♦	22	P-64601	Poppet O-Ring	66	P-32229	Washer - 7PCS
23	P-63055	Poppet	67	P-12624	Magazine Cover	
♦	24	P-64379	Piston Stop O-Ring	68	P-07335	Negator Spring Pin
♦	25	P-64602	Cylinder Seal O-Ring	69	P-18334	Negator Spring
♦	26	P-62094	Gasket	70	P-24434	Screw - 2PCS
♦	27	P-64617	Piston O-Ring	71	P-10285	Stationary Front Plate
28	AS-06120	Piston & Driver Assembly	72	P-24358	Screw - 2PCS	
29	P-03125	Guide Spacer	73	P-99293	Front Block	
30	P-05131	Cylinder	74	P-24497	Screw - 2PCS	
♦	31	P-64603	Cylinder O-Ring	75	P-10347	Removable Front Plate
♦	32	P-64604	O-Ring	77	P-08517	Wear Plate
33	P-03126	Cylinder Guide	78	P-07357	Pin	
♦	34	P-64605	O-Ring	79	P-18333	Latch Spring
35	P-15273	Bumper	80	P-04062	Quick Clear Latch	
36	P-15198	Return Seal	81	P-07334	Pin	
♦	37	P-64240	O-Ring - 2PCS	82	P-99294	Rear Block
38	P-01308	Body	83	P-12410	Magazine	
39	P-64312	O-Ring	84	P-09211	Pusher	
40	P-60156	End Cap	86	P-18267	Spring	
41	P-53165	Safety Guide	88	AS-22041	Plunger w/O-Rings Assembly	
42	P-18328	Spring	89	P-22233	Valve Housing	
43	AS-53087	Safety Assembly	90	AS-22043	Trigger Valve Assembly	
44	P-07327	Trigger Pin	91	AS-53112	Safety Pin Kit	
45	P-07262	Pin	92	P-55003	Handle	
♦	46	P-64332	Valve Housing O-Ring	93	P-24475	Screw - 2PCS
47	P-22144	Trigger Valve Cap	94	AS-55004	Mounting Plate Assembly	
♦	48	P-64333	O-Ring	95	P-13156	Bracket
♦	49	P-64334	O-Ring	96	P-24732	Screw - 2PCS
♦	50	P-64335	O-Ring			
♦ Parts Included In AS- 97403 O-Ring And Seal Kit						

ACCESSORIES (NOT INCLUDED)

85	P-97454	Air Filter	87	AS-21037	Sequential Trigger (Red)
----	---------	------------	----	----------	--------------------------