


# Installation Instructions

## Records Parts and Battery Box

Front View Without Door

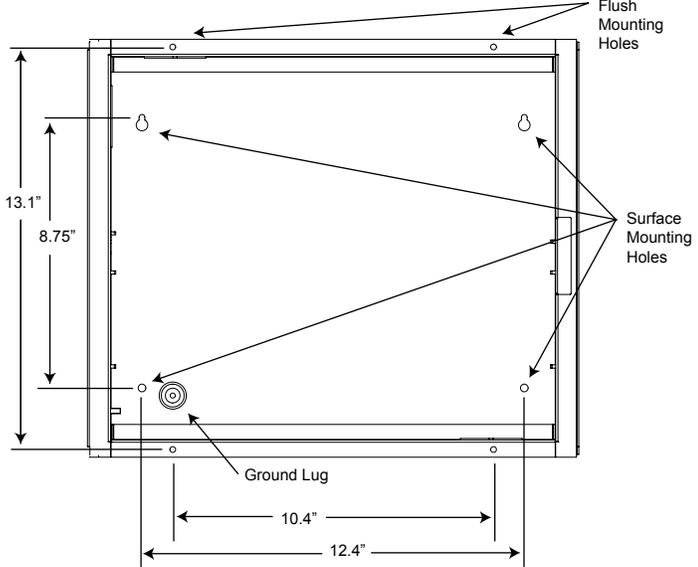

### Installation Procedure ACE-13

- Remove lift-away cover from back box and set aside.
- Place back box on wall where it is to be mounted and mark the location of holes to mount box to the wall.
- Drill appropriate size holes in wall for appropriate mounting screws being used, (screws not supplied).
- Mount back box to wall with appropriate hardware (not supplied).
- Replace cover onto unit.


.LT10659 Rev. A

### Equipment Supplied


- (1) Cover with inner sticker for notes on door.
- (1) Ground Strap and (2) 8-32 flange nuts.
- (1) Back box
- (1) Internal Shelf
- (2) Reflective Front Label

SYSTEM RECORD DOCUMENTS  
 FIRE ALARM BATTERY CABINET  
 FIRE ALARM SPARE PARTS

Aligning Reflective Front Label:  
 Install at 2.5" from right or left edge and 1" from the top

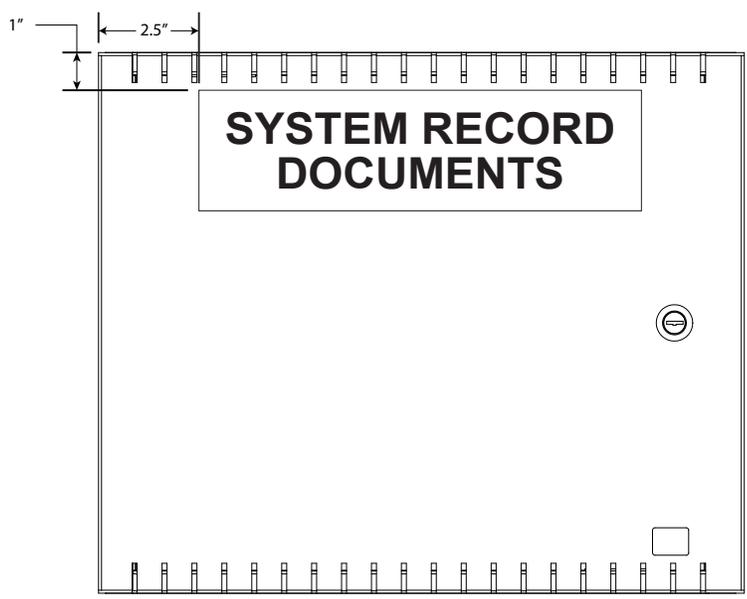


## Vertical Shelf Mount

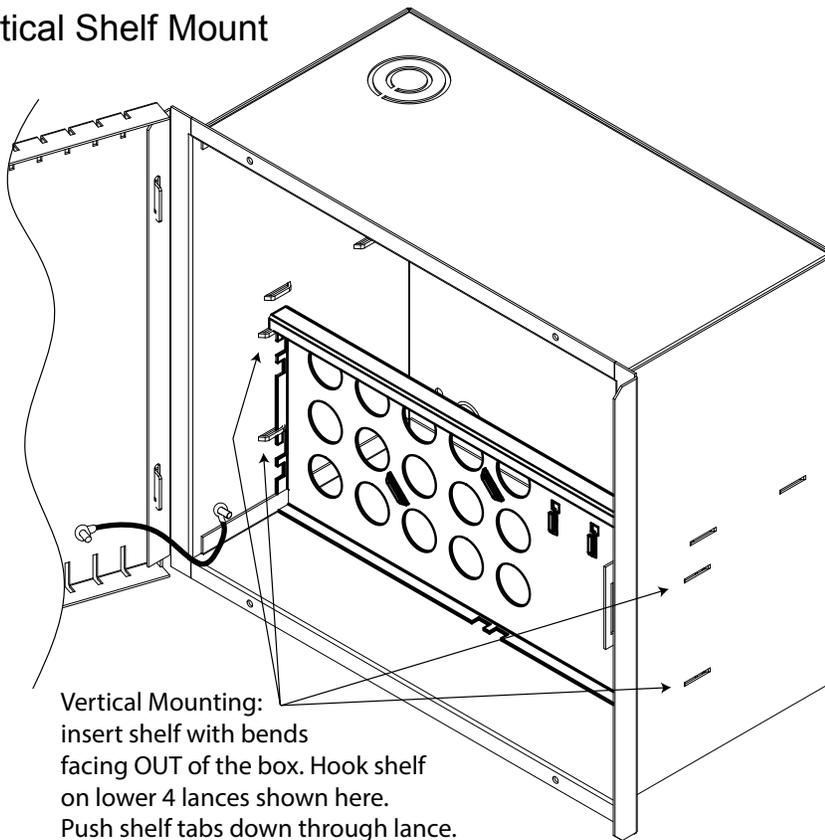


Vertical Mounting:  
insert shelf with bends  
facing OUT of the box. Hook shelf  
on lower 4 lances shown here.  
Push shelf tabs down through lance.

## Battery Retainig Bracket

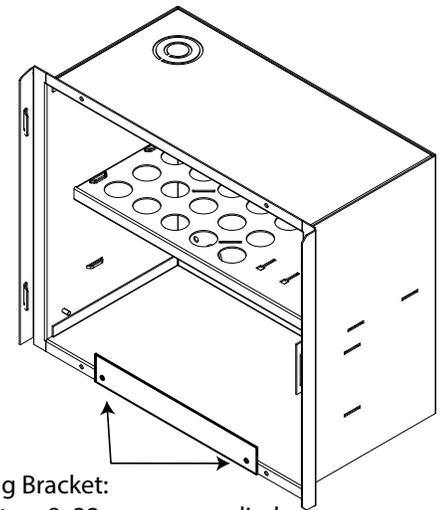

Retaining Bracket:  
Use the two 8x32 screws supplied  
to secure bracket to box.

## Horizontal Shelf Mount

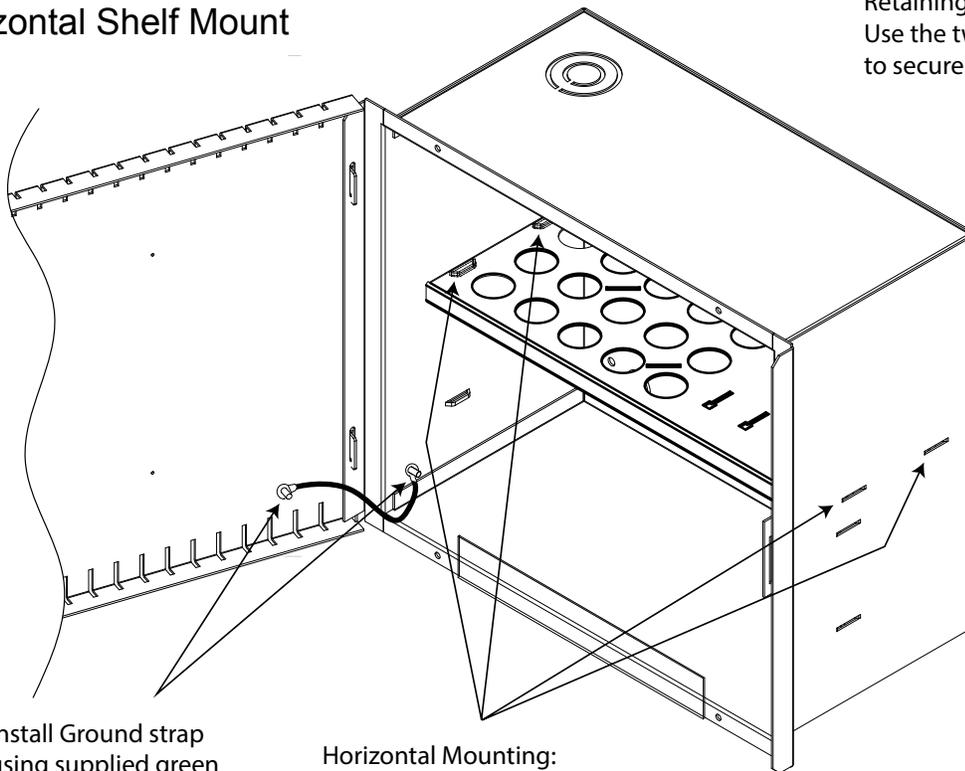

Install Ground strap  
using supplied green  
wire and 8-32 nuts.

Horizontal Mounting:  
insert shelf with bends  
facing DOWN. Hook shelf  
on upper 5 lances (there is one lance  
in the back of the box). Push shelf tabs  
down through lances.