



ASSEMBLY INSTRUCTION

Note: Please do not tighten all the bolts until the chair frame is completely assembled .
Once assembled, tighten all bolts before attaching the seat cushion.


STEP1

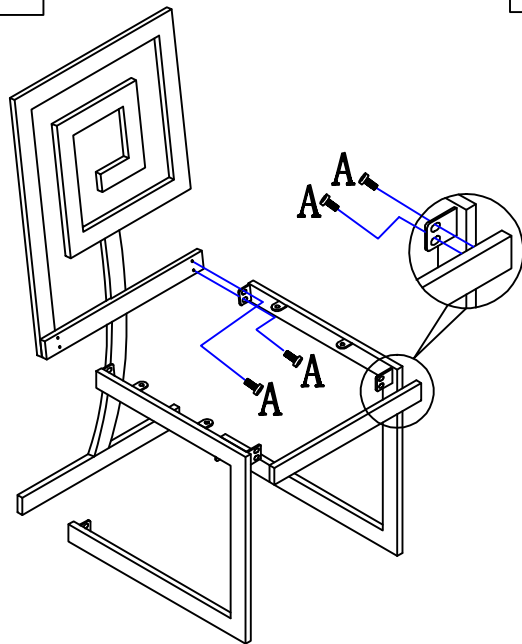



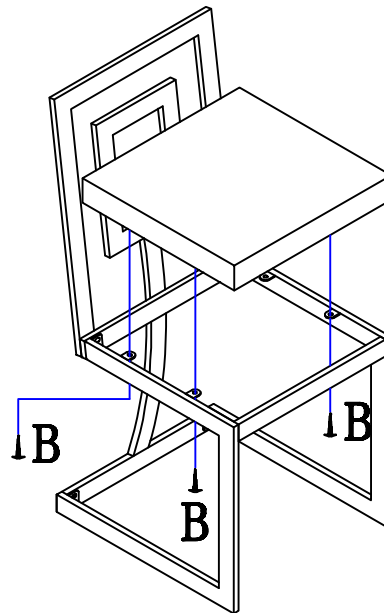
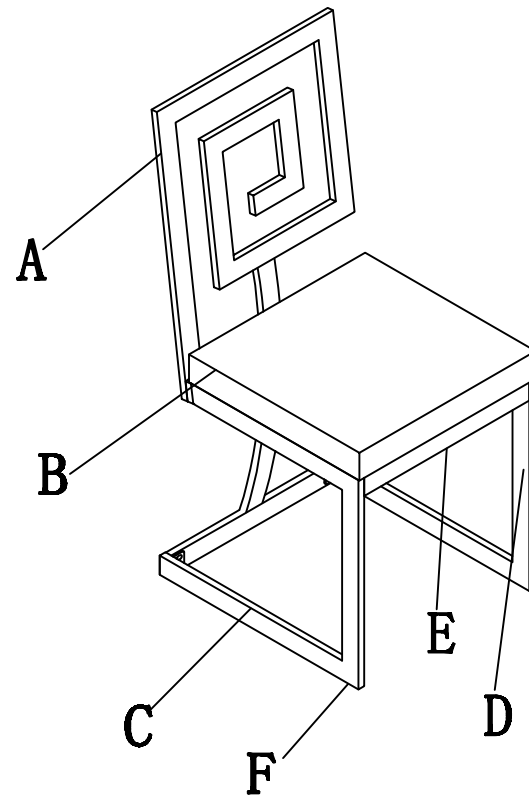
STEP2

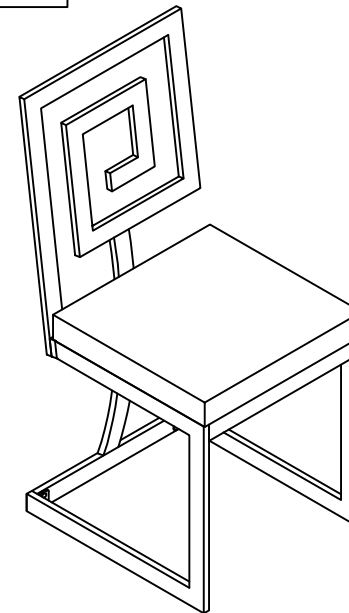

STEP3



A		12pcs	1/4"×12mm Pan Head Bolt
B		4pcs	M5×19mm Wood Screw
C		1pc	Allen Key



	Parts Description	Quantity
A	Chair Back	1
B	Seat Cushion	1
C	Left Side Frame	1
D	Right Side Frame	1
E	Front Stretcher	1
F	Glide(ø6. 2*19)	4