



ASSEMBLY INSTRUCTION

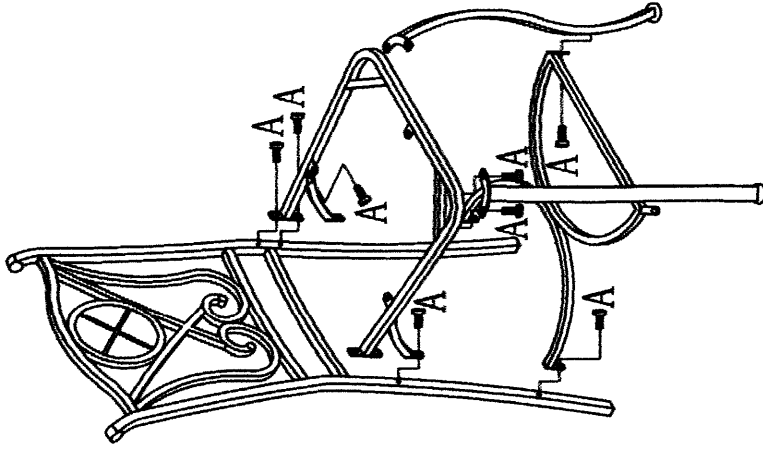


STEP1

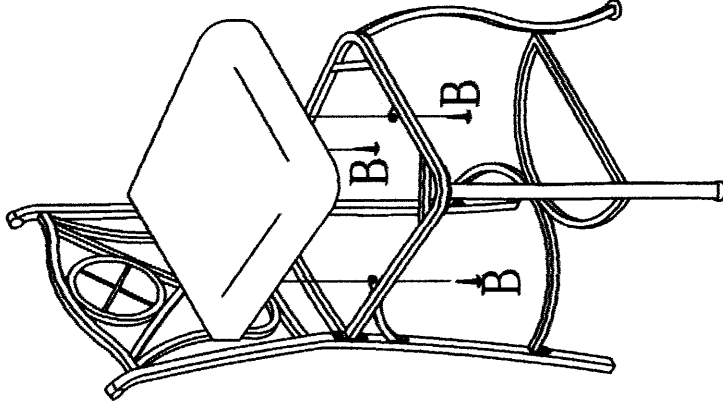

STEP2



Note: Pls do not tighten all bolts until the chair is assembled completely.

A		16pcs	1/4" X 15mm Pan Head Bolt
B		3pcs	M5 X 19mm WOOD SCREW
C		1pc	Allen Key