





# DISPENSE-RITE®

## ADJ Series

### In-Counter Cup Dispensers



Project	_____
Price	_____ Quantity _____
Total	_____ Shipping _____

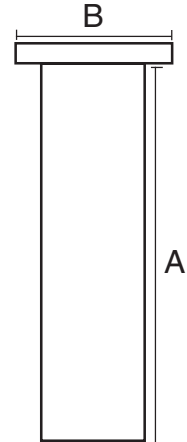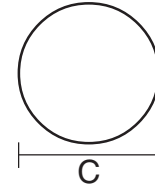

- Exclusive DISPENSE-RITE adjustment mechanism
- Stainless steel construction
- No-jam design
- All models are NSF Listed
- Mount horizontally, vertically or in angled positions
- Quick release mousing collar fully supports the dispenser
- Stainless steel ring bezel standard - Optional powder coated rings are available.  
Available colors: Bumper Black (gloss) and Textured Black (matte)
- Standard models ship with 2 compression springs. "F" Spring inside dispenser
- Single spring models available.

"F" Spring: Foam cups in any position  
Paper or Plastic cups in a horizontal position

"P" Spring: Paper or Plastic cups in a vertical or angled position

Reference	ONE-SIZE-FITS-ALL			ONE-SIZE-FITS-ALL	
	ADJ-1	ADJ-1.50	ADJ-2	ADJ-2S	ADJ-3
<b>Range of Adjustability</b>	2 1/2" - 3 1/2" 64 - 89mm	3" - 3 7/8" 77 - 98mm	3" - 4 5/8" 77 - 118mm	3" - 4 5/8" 77 - 118mm	4 1/2" - 5 1/4" 114 - 133mm
<b>A Under Counter Length</b>	22" 559mm	22" 559mm	22" 559mm	19" 483mm	22" 559mm
<b>B Ring Bezel Diameter</b>	5 3/8" 137mm	5 5/8" 143mm	6 7/8" 175mm	6 7/8" 175mm	7 3/8" 187mm
<b>C Tube Diameter</b>	3 11/16" 94mm	4 1/16" 103mm	4 7/8" 124mm	4 7/8" 124mm	5 1/2" 140mm
<b>D Mounting Collar Cut Out</b>	4" 102mm	4 1/2" 114mm	5 1/4" 134mm	5 1/4" 134mm	5 3/4" 146mm

#### Adjustment Instructions

**Do not bend adjustment clips.**

1. Loosen adjustment screw(s) and load 12 - 15 cups so the rim of the top cup is slightly below the top portion of the adjustment clips.
2. Push the cups down slightly and rotate the ring bezel clockwise until the adjustment clips are slightly tighter than the cup's rim.

**While adjusting, hold the dispenser in the position it will be mounted. (Horizontal, Vertical or Angled)**

3. Push a full sleeve of cups into dispenser and tighten adjustment screw(s).
4. Check the dispensing action. Cups should be dispensed one at a time.
5. When adjustment is correct, the dispenser is ready for installation.

#### Installation Instructions

1. Cut hole for mounting collar. (Row D from chart above)
2. Insert mounting collar with the "UP" arrow to the top for horizontal or angled mounting and to the rear for vertical mounting.
3. Drill four 1/8" (3mm) holes and fasten mounting collar with supplied screws.
4. Insert cup dispenser with the dispenser's weld seam aligned with "UP" arrow.
5. Push dispenser in until flush with counter. Support dispenser with your hand inside the tube and rotate counterclockwise until tight.
6. To remove for cleaning or adjustment, rotate dispenser clockwise and pull straight out of counter.



# DISPENSE-RITE®

**Diversified Metal Products, Inc.**

2205 Carlson Drive • Northbrook, IL 60062 • (847) 753-9595 • fax (847) 753-9648  
www.dispense-rite.com • sales@dispense-rite.com