


“Compact” Scale Line Cleaning Procedure

The “Compact” scale line is NSF certified. The end user can clean the food contact area of the scale and can remove accumulated food product from the inside of the scales to maintain sanitary conditions but s/he must follow the cleaning procedure listed below to avoid change to and subsequent inaccuracies of these scales.

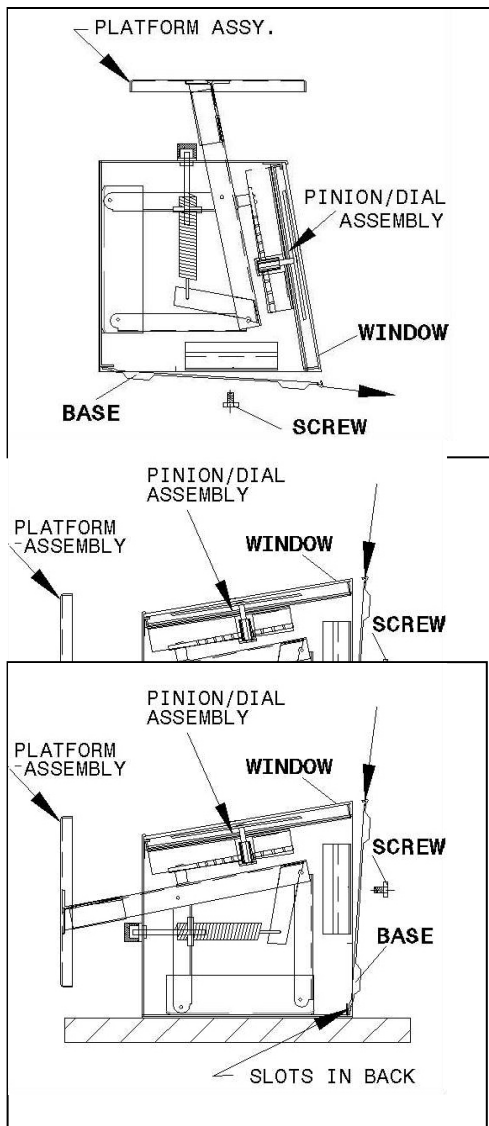

1. The platform can be removed from the scale and washed in the sink or in a dishwasher. If the platform is cleaned while on the scale, wash with mild soap and water or cleaner, rinse and air-dry. Do not allow water to run into the scale or onto the scale window.

- 2a. If it becomes necessary to clean the internal cavity of the scale, remove the scale base by removing the two screws that secure the base to the scale housing. Shake out any loose food product being careful not to allow the pinion plate and window to become disassembled from the scale, as this will allow the scale rack and pinion to be misindexed.

- 2b. If the internal cavity requires further cleaning, wipe out with damp cloth.

CAUTION: INTERNAL PARTS MAY HAVE SHARP EDGES. DO NOT PUT HANDS INSIDE THE SCALE WITHOUT PROTECTIVE GLOVES.

- 2c. If it becomes necessary to clean the outside of the window, wash using a soft cloth and mild soap and water. Wipe clean using a soft non-abrasive cloth and let air-dry.

3. To reassemble slide the base in place on the bottom of the scale making sure that the base slides into the slot provided by the back of the scale. Align the two holes in the base with the two holes in the scale housing and secure using the two screws that were removed.