



# NORITZ

# Gas Conversion Guide



Model : NRCP1112-DV / NRCP982-DV  
NRCP111-DV / NRCP98-DV

Noritz condensing gas water heater is configured for Natural Gas(NG) or Propane Gas(LP) from the factory. If your gas supply is LP(NG), your water heater can be converted to burn LP(NG) gas as follows:

### ⚠ NOTICE

Conversion kit must be ordered in order to convert gas type (not included in a box). Verify the supplied gas type before completing the gas conversion. After conversion, the label (included) displaying the converted gas type must be attached to the water heater. (Refer to Figure 11)

### ⚠ WARNING

This conversion kit shall be installed by a qualified service agency in accordance with the manufacturer's instructions and all applicable codes and requirements of the authority having jurisdiction. The information in these instructions must be followed to minimize the risk of fire or explosion or to prevent property damage, personal injury or death. The qualified service agency is responsible for the proper installation of this kit. The installation is not proper and complete until the operation of the converted appliance is checked as specified in the manufacturer's instructions supplied with the kit.

In Canada, The Conversion shall be carried out in accordance with the requirements of the provincial authorities having jurisdiction and in accordance with the requirements of the CSA-B149.1, natural gas and propane installation code.

### ⚠ CAUTION

This water heater has already been set to burn Natural gas (or Propane gas), but can be converted to burn Propane gas (or Natural gas). Before operating the heater, verify that the type of gas supplied to your water heater is correct.

#### ■ Included Accessories

#	Part	Shape	Qty	#	Part	Shape	Qty
1	Gas Mixer Body		1	3	Gas Mixer Packing		1
				4	Gas Conversion Guide (This Document)		1
2	O-ring (P62)		1	5	Gas Conversion Stickers (English/French)		1

#### ■ Specifications for Orifice and Needle

Parts	Gas Type	
	NG	LP
	NRCP111 / 1112-DV(CK-69) NRCP98 / 982-DV(CK-67)	NRCP111 / 1112-DV(CK-70) NRCP98 / 982-DV(CK-68)
Gas Mixer Body		
Orifice  Orifice for LP can be identified by a strip line and circle. (Circle only for NG orifice) Or actual diameter is stamped.	0.381" (9.7 mm) 	0.307" (7.8 mm) 
Needle 	No Color mark at the tip of needle Or 9.9mm is stamped 	Red dot mark at the tip of needle Or 8.0mm is stamped 

1. Turn off both gas and water supply to the water heater. (Valves are located on the plumbing pipes.) And, turn the power off.
2. Use a hand screwdriver to remove the 4 screws for the front cover. See Figure 1.
3. Remove AGM wire connector. See Figure 2.

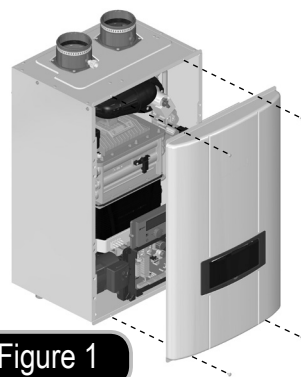


Figure 1

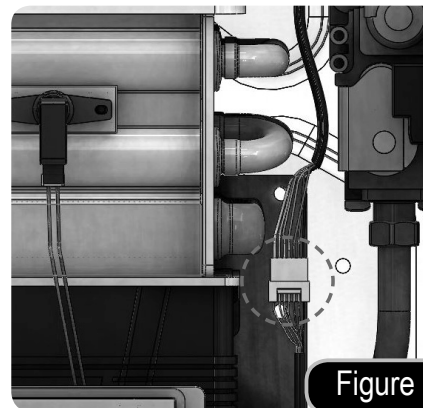


Figure 2

4. Use a hand screwdriver to remove the 3 screws for the air pipe. See Figure 3.
5. Loosen 2 screws to remove AGM. Separate AGM motor from AGM plate. See Figure 4.

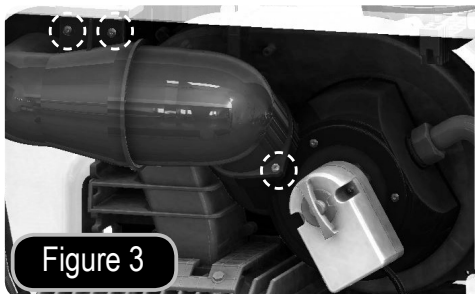


Figure 3

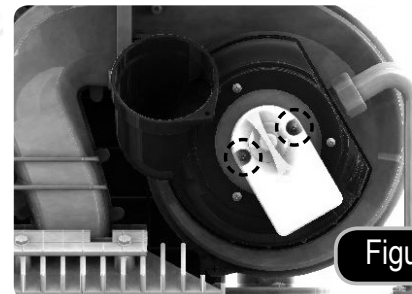


Figure 4

6. Loosen 3 screws to remove 'AGM cover'. See Figure 5.
7. Use a crescent wrench and turn the nut of gas inlet pipe to release. And then loosen 3 screws to remove 'Gas Mixer Body'. See Figure 6.

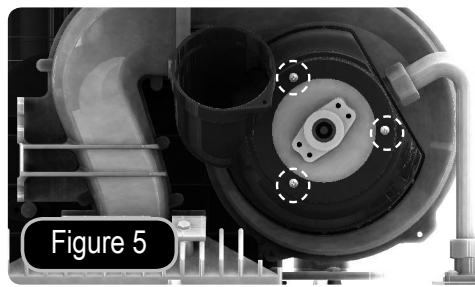


Figure 5


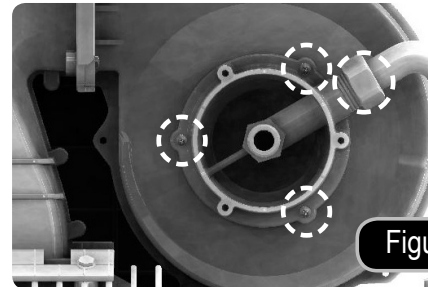


Figure 6

8. Remove the new parts from the box. Remove the 3 screws holding the 'Needle Assembly' to the gas mixer body.

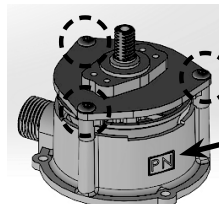

NG	PN
LP	PP

9. Replace the old 'Gas Mixer Body' with new one for LP gas (Natural gas) use. The gas type is printed on the Gas Mixer Body, refer to the table above. A new O-ring (①) and Packing (②) are supplied with the conversion kit. Make sure to replace each part. Use a hand screwdriver to tighten the Gas Mixer Body and then use a crescent wrench to tighten the gas inlet pipe to the Gas Mixer Body. See Figure 7.

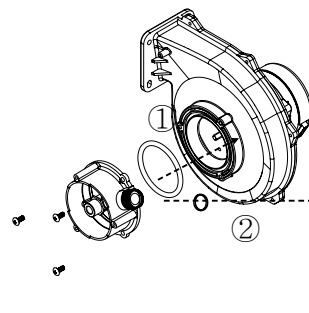


Figure 7

10. Install the new 'Needle Assembly' with the correct gas type. (Verify using Figure 8.)

[NOTE] • Make sure to confirm 'Needle Assembly' specification below.



Figure 8

Item	NG	LP
Needle Assembly	 No Color mark at the tip of needle Or 9.9mm is stamped	 Red dot mark at the tip of needle Or 8.0mm is stamped

11. Re-install 'Gas Mixer Body'. Re-tighten gas inlet pipe using crescent wrench. See figure 6. for correct orientation.
12. Re-assemble remaining parts.  
See Figure 9 for the correct assembly order.  
For AGM placement, see Figure 12.  
Replacing the air pipe, see Figure 3.  
For AGM cover, see Figure 5.

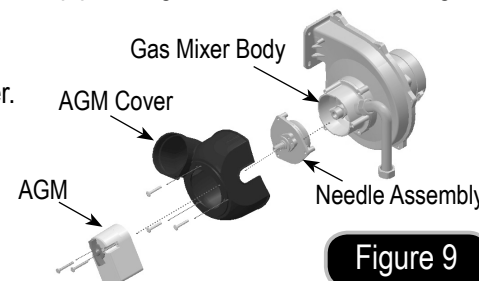



Figure 9



NORITZ

# Gas Conversion Guide

13. Reattach AGM wire connector.  
14. Turn on water, gas, power.  
15. Change the dip switch on the circuit board.

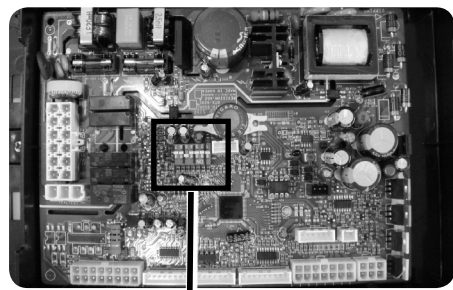

Dip Switch		State	
5	Gas Type	NG : ON	LP:OFF
6	High Fire	6: ON	7: OFF
7	Low Fire	6: OFF	7: ON
6, 7	Normal Operation	6: OFF	7: OFF

	NRCP111 / 1112-DV Gas Type : LP	NRCP98 / 982-DV Gas Type : LP	NRCP111 / 1112-DV Gas Type : NG	NRCP98 / 982-DV Gas Type : NG
High Fire				
Low Fire				
Normal Operation				

16. Turn on multiple hot water fixtures on the domestic side of the system.
17. Operate the water heater in the low fire state (see Step 15). Verify combustion of the water heater by measuring carbon dioxide in the combustion products.  
If the CO value is not within  $\pm 0.1\%$  of the value listed in Table 1, the gas valve set screw needs to be adjusted.  
If adjustment is necessary, open the manifold pressure port by loosening the screw two turns as shown in Figure 10. Connect a digital manometer to the manifold pressure port.  
For dual port digital manometer, use the positive pressure side.  
Turn the set screw no more than 1/4 turn clockwise to raise or counterclockwise to lower the CO value.  
(Remove cap screw with a Torx T-40 screw driver or 5 mm Allen Wrench to expose offset adjustment screw.)

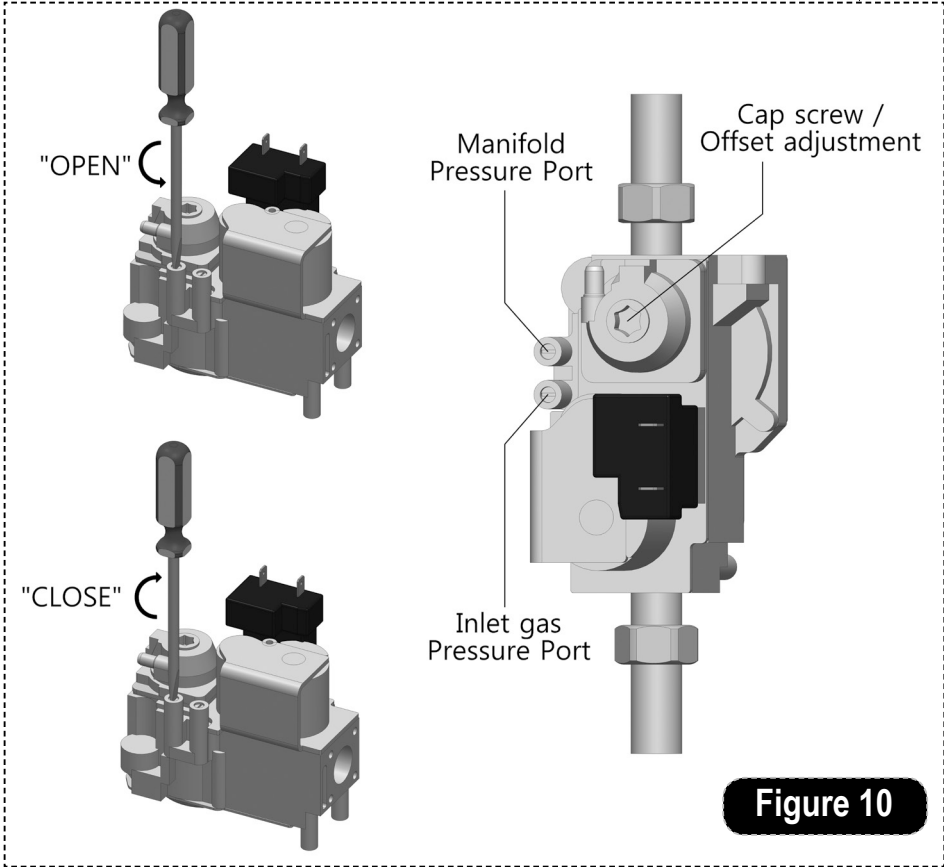
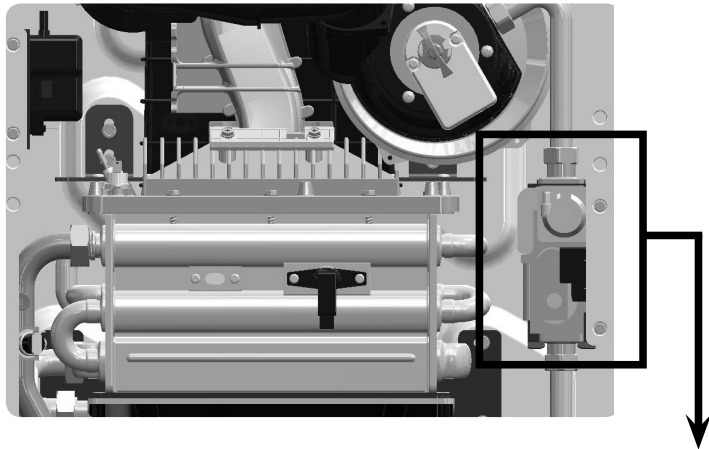


Figure 10

18. If carbon dioxide and manifold pressure value are matched with Table 1 in the low fire combustion, switch dip switch from low to high fire and check carbon dioxide and manifold pressure values. If the values are matched with Table 1, shut off the unit and close the gas valve. Then disconnect the hose that is connected to the manifold pressure port, then tighten the screw for the manifold pressure port, and return the dip switch back to normal condition. Finally, close the front cover.

Table 1

Manifold pressure		'LP' type	'NG' type
		2" VENT / 3" VENT	2" VENT / 3" VENT
NRCP111 / 1112-DV	High fire	-0.07 $\pm$ 0.01"	-0.04 $\pm$ 0.01"
	Low fire	-0.06 $\pm$ 0.01"	-0.03 $\pm$ 0.01"
NRCP98 / 982-DV	High fire	-0.07 $\pm$ 0.01"	-0.04 $\pm$ 0.01"
	Low fire	-0.06 $\pm$ 0.01"	-0.03 $\pm$ 0.01"

CO <sub>2</sub> value		'LP' type		'NG' type	
		2" VENT	3" VENT	2" VENT	3" VENT
NRCP111 / 1112-DV	High fire $\pm$ 0.1%	10.7%	10.8%	9.0%	9.1%
	Low fire $\pm$ 0.1%	9.3%	9.2%	8.4%	8.5%
NRCP98 / 982-DV	High fire $\pm$ 0.1%	10.9%	10.9%	9.1%	9.2%
	Low fire $\pm$ 0.1%	9.4%	9.3%	8.3%	8.4%

19. Attach the label (Figure 11) in a conspicuous location adjacent to the rating plate.  
(French labels also included in box.)

**This unit has been converted to \_\_\_\_\_.**  
**converted to \_\_\_\_\_.**  
**Inlet Gas Pressure :**  
Min. \_\_\_\_\_ ~ Max. \_\_\_\_\_ inches  
**Manifold Gas Pressure :**  
Min. \_\_\_\_\_ ~ Max. \_\_\_\_\_ inches  
**BTU input :**  
Max. \_\_\_\_\_ ~ Min. \_\_\_\_\_  
**Conversion Kit : \_\_\_\_\_**

This water heater was converted on :  
/ / to \_\_\_\_\_ gas  
with Kit No. \_\_\_\_\_  
by \_\_\_\_\_  
(Name and address of organization making this conversion, who accepts responsibility for the correctness of this conversion.)

Figure 11

## Warning : AGM Mounting Position.

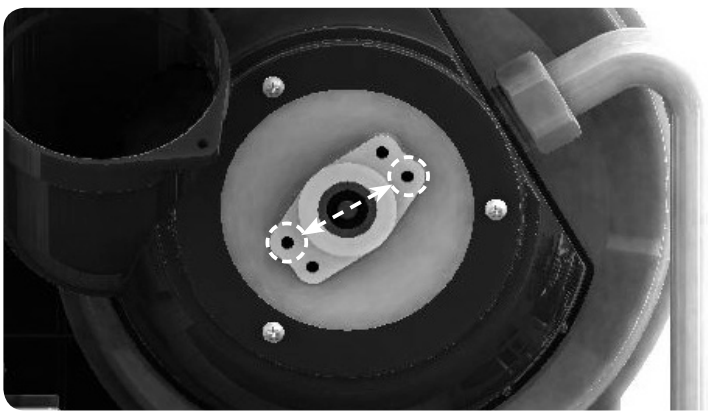


Figure 12



NORITZ AMERICA CO. 11160 Grace Avenue  
Fountain Valley, CA 92708  
Phone : 866 - 766 - 7489